

## RECOMMENDED PRIMARY CONTROLLERS FOR E1F & E2F



**UBEC 1**  
(P/N 08899150)



**Specify Harness\*:**  
- To Valve



**UBEC 2**  
(P/N 08899160)



**Specify Harnesses\*:**  
- To Valve  
- To Pressure Sensor



**UBEC 3**  
(P/N 08899170)



**Specify Harnesses\*:**  
- To Valve  
- To Pressure & Flow Sensor



**UICS 2**  
(P/N 08899190)



**Specify Harnesses\*:**  
- To Valve  
- To Pressure Sensor  
& Air Solenoid



**Specify:**  
- Pressure Sensor



**Specify:**  
- Pressure Sensor  
- Flow Sensor\*\*



**E1F**  
Position (non-CAN)



**E2F (For EB6D Only)**  
Position (non-CAN)

\*Contact Elkhart Brass for available Harness length options. Length varies for 'Controller to Valve' and 'Controller to Sensor(s)'.  
\*\*Contact Elkhart Brass for available flow sensor mounting options.

# RECOMMENDED CONTROLLERS FOR E3F & E5F



**UBEC 1S**  
(P/N 08899151)




**UBEC 1C**  
(P/N 08899152)



**UBEC 1AT**  
(50/95 - P/N 08899155)

Does not  
require  
harness

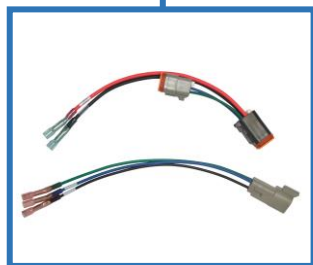

- Included:**
- Power/CAN Harness
  - Control CAN Harness



- Included:**
- Tank Level Display
  - Pressure Sensor
  - Required Harnesses

Wiring to valve  
NOT included

Wiring to valve  
NOT included



**E3F**  
Position (CAN Enabled)



**E5F (For EB6D Only)**  
Position (CAN Enabled)

## RECOMMENDED CONTROLLERS FOR E4F & E6F



**UBEC 2**  
(P/N 08899160)



**Specify Harnesses\*:**  
- Controller to Valve  
- Valve to Pressure Sensor



**Specify:**  
- Pressure Sensor



**UBEC 3**  
(P/N 08899170)



**Specify Harnesses\*:**  
- Controller to Valve  
- Valve to Pressure & Flow Sensor



**Specify:**  
- Pressure Sensor  
- Flow Sensor\*\*



**E4F**  
Position (CAN Enabled)  
with Flow and Pressure



**E6F (For EB6D Only)**  
Position (CAN Enabled)  
with Flow and Pressure

\*Contact Elkhart Brass for available Harness length options. Length varies for 'Controller to Valve' and 'Valve to Sensor(s)'.  
\*\*Contact Elkhart Brass for available flow sensor mounting options.

## SECONDARY CONTROLLER COMPATIBILITY

**NOTE: A Primary Controller can have only ONE Secondary Controller.**



**UBEC 1**  
(Primary)



**Specify Harness\*:**  
- Length



**UBEC 1\*\***  
(Secondary)  
(P/N 08899154)



**UBEC 2**  
(Primary)



**Specify Harness\*:**  
- Length



**UBEC 2\*\***  
(Secondary)  
(P/N 08899164)



**UBEC 3**  
(Primary)



**Specify Harness\*:**  
- Length



**UBEC 3\*\***  
(Secondary)  
(P/N 08899174)



**UICS 2**  
(Primary)



**Specify Harness\*:**  
- Length



**UICS 2\*\***  
(Secondary)  
(P/N 08899194)

\*Contact Elkhart Brass for available Harness length options. Length determined by distance from Primary Controller to Secondary Controller.

\*\*Programming as Secondary Controller is required before use.